

DIAGRAM: DVD

FUNCTION	J1	J2
1	8	10
2	9	10
3	7	10
4	1	8
5	1	9
6	7	9
7	5	8
8	1	5
9	5	10
0	2	12
POWER	5	11
VOCAL	8	11
BGV	5	12
STOP	2	6
CANCEL/DEL	2	4
PAUSE / PLAY	4	5
KEY +UP	1	7
KEY -	7	11
TEMPO+	3	7
TEMPO-	5	7
RES	2	9
VOL -	4	11
VOL +	6	8

MP MEGAPRO PLUS

MEGA SOUND