

MS / MP EXODUS HD & MS ARRAY DIAGRAM

FUNCTION	J1	J2
1	1	20
2	5	16
3	5	15
4	2	20
5	5	19
6	24	14
7	23	14
8	5	20
9	24	16
0	23	16
POWER	24	17
USB	5	21
BGV	24	15
REC	23	19
STOP	23	15
CANCEL	2	15
PAUSE	23	17
KEY UP	4	18
KEY DOWN	1	15
TEMPO +	5	14
TEMPO -	3	19
RES	2	14
UP	6	14
DOWN	6	15
LEFT	6	16
RIGHT	6	17
OK	6	18
BACK	2	15
VOL +	4	20
VOL -	23	21